



**WARNING**  
**RISK ELECTRIC SHOCK**  
**DO NOT OPEN**



**WARNING :** To reduce the risk of electric shock do not remove cover or back.  
No user-serviceable parts inside refer service to qualified service personnel.

Operator Safety has been taken into consideration at the design and manufacture phase, but inappropriate operation may cause electric shock or fire. To prevent the product from being damaged, the following rules should be observed for the installation, use and maintenance of the product. Read the following safety instruction before starting the operation.

The User Manual uses the following symbols to ensure a safe operation and prevent any damage to operators' r properties:



**THIS SYMBOL INDICATES THAT HIGH VOLTAGE IS PRESENT INSIDE. IT IS DANGEROUS TO MAKE ANY KIND OF CONTACT WITH ANY INSIDE PART OF THIS PRODUCT.**



**THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE LITERATUR ACCOMPANYING THE APPLIANCE.**

**CANADIAN NOTICE:**

This Class B digital apparatus compiles with Canadian ICES-003.

## IMPORTANT SAFETY INSTRUCTIONS

Read all of the instructions before using this appliance. When using this appliance, always exercise basic safety precautions, including the following:

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) **WARNING**-to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

PORTABLE CART WARNING  
(symbol provided by RETAC)



S3126A

**The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.**

**The mains plug is used as the disconnect device, remain it readily operable during the apparatus normal use.**

# SAVE THESE INSTRUCTIONS

Thank you for purchasing the Haier product. This easy-to-use manual will guide you in getting the best use of your product. Remember to record the model and serial number. They are on label in back of the unit.

---

Model number

---

Serial number

---

Date of purchase

Staple your receipt to your manual. **You will need it to obtain warranty service.**

 
# Contents

Warning.....	2
Important Safety Instructions .....	3
Save These Instructions.....	4
Controls .....	5
Connection Options.....	7
Universal Remote Control.....	8
Accessories.....	9
Antenna Connection.....	10
External Equipment Connections.....	11
Operation.....	17
Menu Operation.....	18
Maintenance.....	30
Cleaning the screen.....	30
Cleaning the Cabinet.....	30
Extended absence.....	30
Product specification.....	31

# Controls

This is a simplified representation of front panel.  
Here shown may be somewhat different from your TV.


## Front panel controls

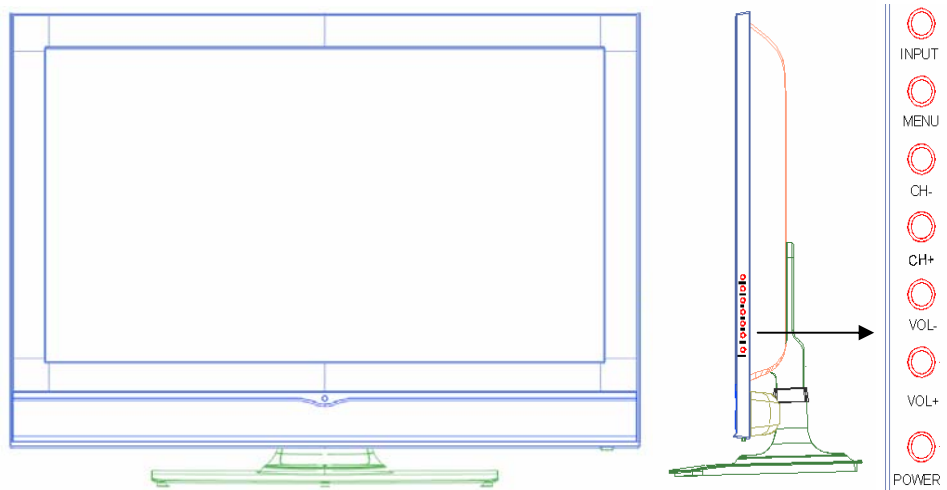

- |   |   |
|---|---|
| 1 | <b>INPUT:</b> Press to show the input source mode. In the <b>MENU/INPUT</b> screen, these buttons serve as <b>ENTER</b> buttons.  |
| 2 | <b>MENU:</b> Menu display.  |
| 3 | <b>CH-/+</b> : Press to scan through channels. To scan quickly through channels, press and hold down either +/- . In the <b>MENU</b> screen, these buttons serve as <b>▲/▼</b> buttons. |
| 4 | <b>VOL -/+</b> : Press to adjust the volume .In the <b>MENU</b> screen, these buttons serve as <b>◀/▶</b> buttons.  |
| 5 | <b>POWER:</b> Press to turn on and off the TV.  |

# Connection options
 
## Back panel controls

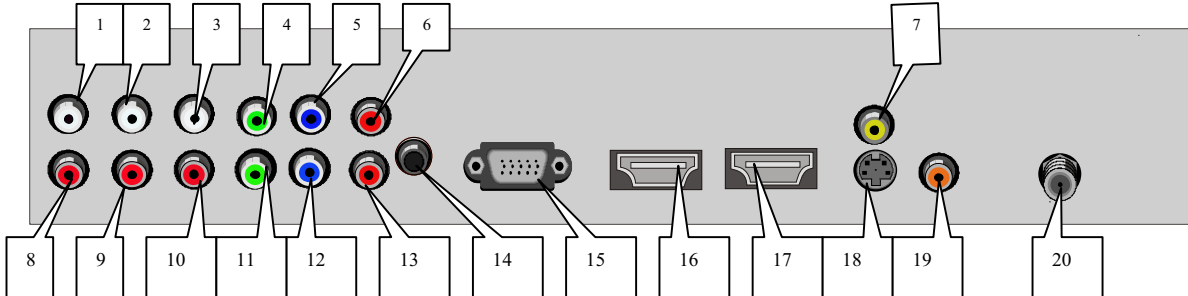


1	YPbPr 1-Left Audio In	11	YPbPr 2-Y in
2	YPbPr 2-Left Audio In	12	YPbPr 2-Pb In
3	CVBS & S-Video Left Audio In	13	YPbPr 2- Pr In
4	YPbPr 1-Y in	14	PC- Audio In
5	YPbPr 1-Pb In	15	PC-RGB In
6	YPbPr 1- Pr In	16	HDMI 1 In
7	CVBS In	17	HDMI 2 In
8	YPbPr 1-Right Audio In	18	S-Video In
9	YPbPr 2-Right Audio In	19	Coaxial output terminal
10	CVBS & S-Video Right Audio In	20	TV signal In

# Universal Remote Control

 The remote control cannot be operated unless the batteries are properly loaded.  
When using the remote control, aim it at the remote control sensor on the TV.

## Fonctions introduction

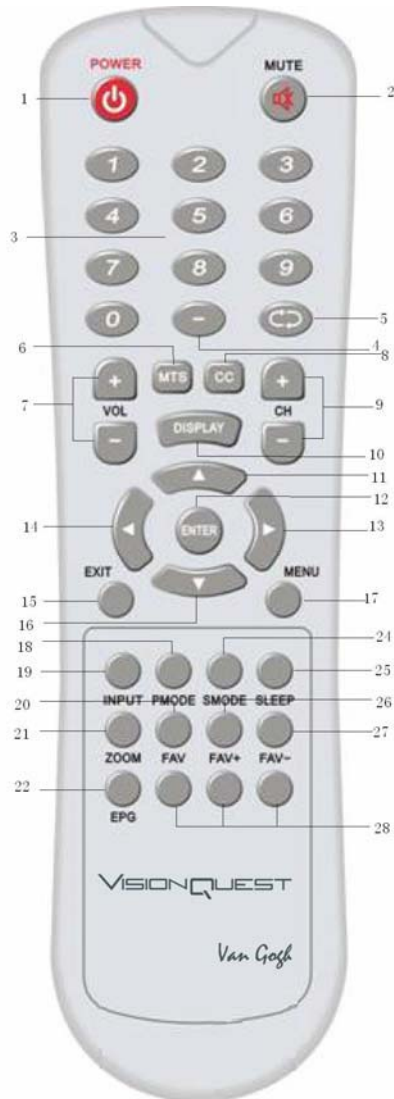

### 1 POWER

Press to turn on and off the TV

### 2 MUTE

Switches the sound on or off.

### 3 Numeric buttons

Press to change the channel.

### 4 - Button

Press to select additional channels (digital) being broadcast by the same station. For example, to select channel "54-3", press "54", then press "-" and "3".

### 5

Tv mode recall

### 6 MTS

Mono", "Stereo" and "Sap".

### 7.VOLUME UP/DOWN

Press to adjust the volume.

### 8 CC(closed caption)

Select a closed caption.

### 9CHANNEL UP/DOWN

Press to scan through channels. To scan quickly through channels, press and hold down either +/- .

### 10 Display

Display present mode

### 11,16 ▲/▼

### UP/DOWN

### 14,13 ◀/▶

### RIGHT/LEFT

### 15 EXIT

Clears all on-screen displays and returns to TV viewing from any MENU

### 17 MENU

Brings up the main menu to the screen.

### 18 PMODE

Selects the picture mode appropriate for the program's character.

### 19 INPUT

Show the input source mode.

### 20 FAV

Favorite television programs

### 21 ZOOM

The zoom mode settings can be also in the screen setting

### 22 EPG

Electronic program guide

### 24 SMODE

Selects the sound mode appropriate for the program's character.

### 25 SLEEP

Displays the Sleep Timer option.

### 26 ,27 FAV+/-

Favorite television programs up/down

28 NC : No use buttons.

## Accessories



Remote control



 
User manual




Power cable



Attention Card

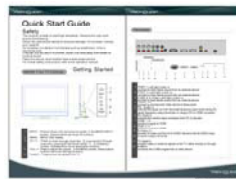



Quick Start Guide(English Version)

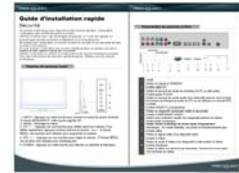 

Quick Start Guide(French Version)

## Antenna Connection

  Generally speaking, to enjoy a clearer picture, we recommend that you use a CATV system or an outdoor antenna. Over-the-air TV reception quality will depend on your antenna type, antenna location and antenna positioning.

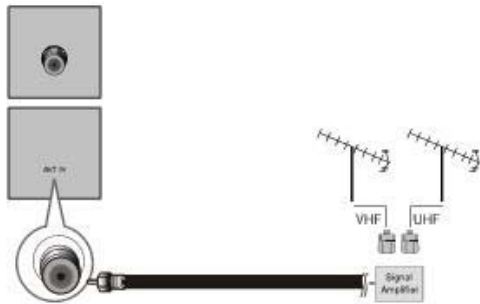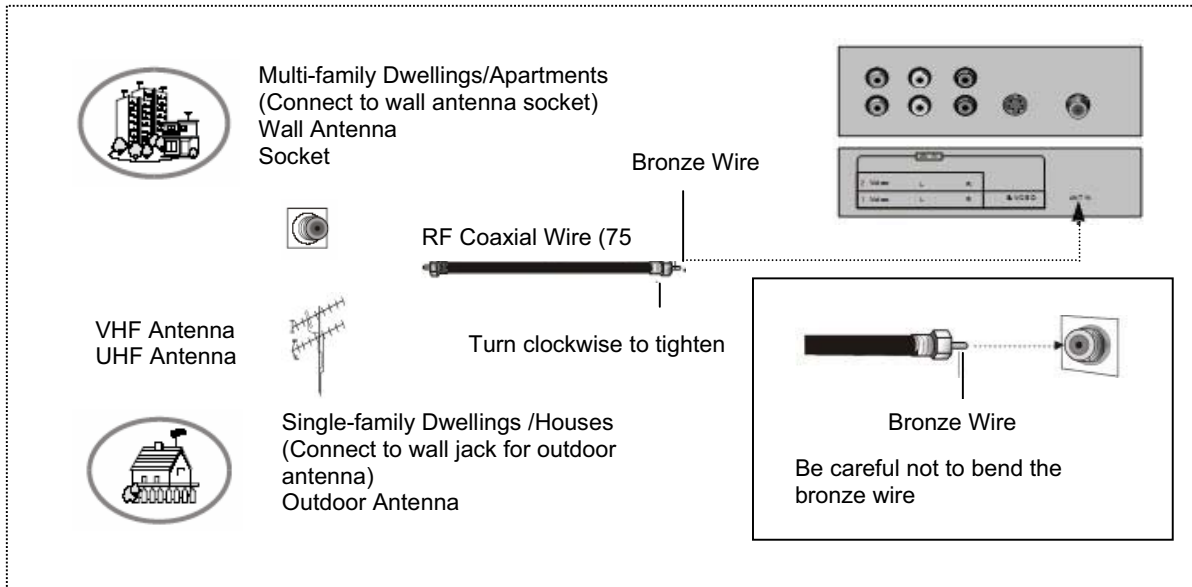

- To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- If the antenna needs to be split for two TV's, install a 2-Way Signal Splitter in the connections.
- To install the antenna properly please contact a professional in your area.

# External Equipment Connections

**NOTE:** All cables shown are not included with the TV.

## Choose Your Connection

There are several ways to connect your television, depending on the components you want to connect and the quality of the signal you want to achieve. The following are examples of some different ways to connect your TV with different input sources.

### VCR connection

 
To avoid picture noise (interference), leave an adequate distance between the VCR and TV.

#### Connection Option 1

Set VCR output switch to channel 3 or 4 and then tune the TV to the same channel number.

#### Connection Option 2

1. Connect the audio and video cables from the VCR's output jacks to the TV input jacks, as shown in the figure. When connecting the TV to VCR, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red). If you connect an S-VIDEO output from VCR to the S-VIDEO input, the picture quality is improved; compared to connecting a regular VCR to the Video input.
2. Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
3. Select the input source with using the INPUT button on the remote control, and then press / button to select the source, press the **OK** button to confirm.

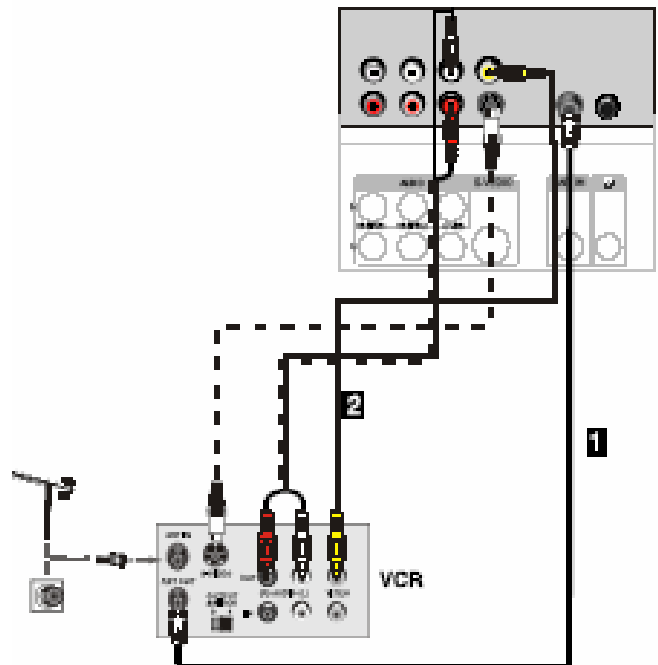


## External A/V Source Setup

### How to connect

Connect the audio and video cables from the external equipment's output jacks to the TV input jacks, as shown in the figure. When connecting the TV to external equipment, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).

### How to use

 1. Select the input source with using the INPUT button on the remote control.
2. Press the / button to select the desired source.
3. Press the **OK** button to confirm.
4. Operate the corresponding external equipment.

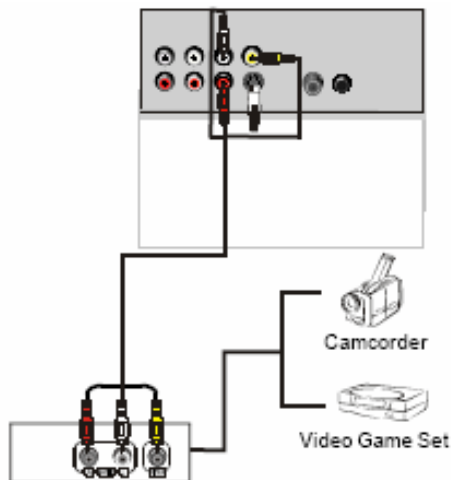

## DVD connection

### How to connect

 
1. Connect the DVD video outputs (COMPONENT) to the Y Pb Pr jacks on the TV and connect the DVD audio outputs to the Y Pb Pr Audio IN jacks on the TV, as shown in the figure.
2. If your DVD only has an S-VIDEO output jack, connect this to the S-VIDEO input on the TV. as shown in the figure.

### Note

If your DVD player does not have component video output, use S-Video.

### How to use

1. Turn on the DVD player, insert a DVD.
2. Use the INPUT button on the remote control to select Y Pb Pr mode.
3. Press Play button on external equipment for program play.
4. Refer to the DVD player's manual for operating instructions.

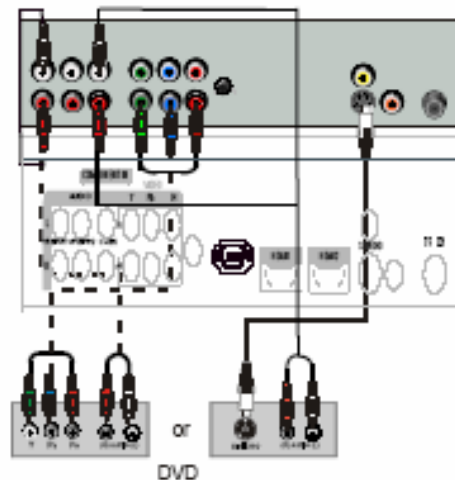

### Component input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the TV	Y	Pb	Pr
Video output ports on DVD player	Y	Pb	Pr
	Y	B-Y	R-Y
	Y	CB	CR

### Note

The audio input terminal of AV IN 1 is compared with S-VIDEO.

## DTV connection

HDMI

This TV can receive Digital Over-the-air/Cable signals without an external digital set-top box. However, if you do receive Digital signals from a digital set-top box or other digital external device, refer to the figure as shown below.

This TV supports HDCP (High-bandwidth Digital

 
### How to connect

Use the TV's **COMPONENT**, **PC** or **HDMI/DVI** jack for video connections, depending on your set-top box connector. Then, make the corresponding audio connections.

### How to use

1. Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
2. Use INPUT on the remote control to select **COMPONENT**, **PC** or **HDMI/DVI** source.

Signal	Component	HDMI/DVI
480i	Yes	Yes
480p	Yes	Yes
720p	Yes	Yes
1080i	Yes	Yes

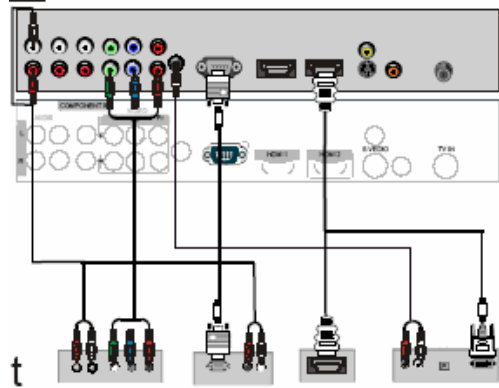

## Digital Audio Output

Send the TV's audio to external audio equipment (stereo system) via the Digital Audio Output (Optical) port.

 
### How to connect

1. Connect one end of an optical cable to the TV Digital Audio(Optical) Output port.
2. Connect the other end of the optical cable to the digital audio (optical) input on the audio equipment.

See the external audio equipment instruction manual for operation.

### Note

When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off.

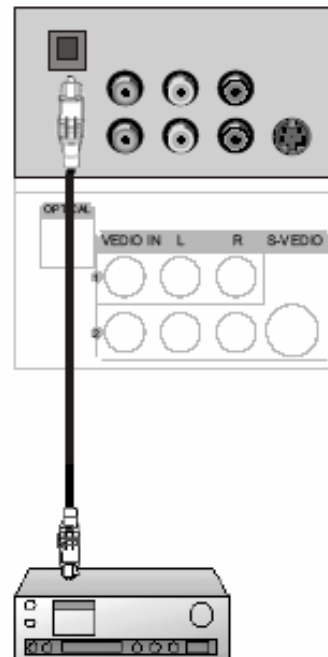

# HDMI

## **When the source device(DVD player or Set Top Box) supports HDMI**

### **How To Connect**

1. Connect the source device to HDMI port of this TV with an HDMI cable(not supplied with this product).
2. No separated audio connection is necessary.

### **How To Use**

If the source device supports Auto HDMI function, the output resolution of the source device will be automatically set to 1280x720p.

If the source device does not support Auto HDMI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the source device to 1280x720p. Select HDMI input source in input source option of Select Main source menu.

## **When the source device(DVD player or Set Top Box) supports DVI**

### **How To Connect**

1. Connect the source device to HDMI port of this TV with a HDMI-to-DVI cable(not supplied with this product).
2. A separated audio connection is necessary.
3. If the source device has an analog audio output connector, connect the source device audio output to DVI Audio In port located on the left side of HDMI port.

### **How To Use**

If the source device supports Auto DVI function, the output resolution of the source device will be automatically set to 1280x720p.




If the source device does not support Auto DVI, you need to set the output resolution appropriately.

To get the best picture quality, adjust the output resolution of the source device to 1280x720p.


Press the INPUT button to select HDMI input source in input source option of Select Main source menu.

Installation
   
# Cable sample

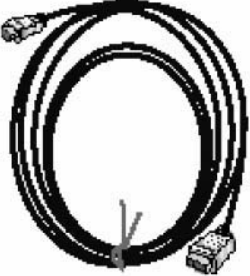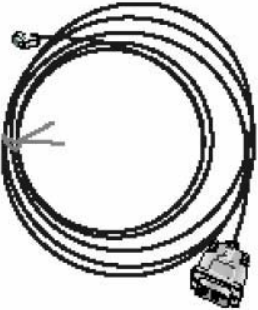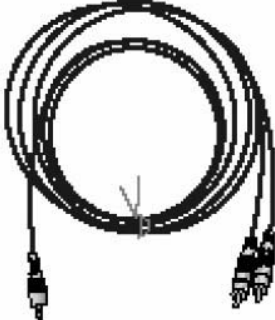 A coiled black cable with an HDMI connector on one end and a different connector on the other.	<p><b>HDMI Cable</b> (not supplied with the product)</p>
 A coiled black cable with an HDMI connector on one end and a DVICable connector on the other.	<p><b>HDMI to DVICable</b> (not supplied with the product)</p>
 A coiled black cable with a stereo connector on one end and two RCA connectors on the other.	<p><b>Analog Audio Cable</b> (Stereo to RCA type) (not supplied with the product)</p>

# Power source

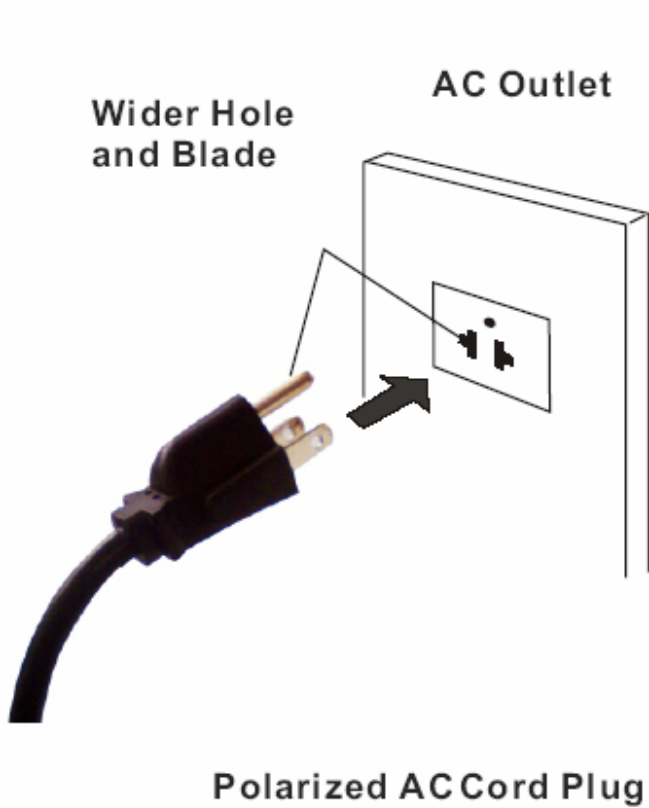 

## TO USE AC POWER SOURCE

Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard polarized AC outlet.

### Note

- Never connect the AC line cord plug to other than the specified voltage. Use the attached power cord only.
- If the polarized AC cord does not fit into a nonpolarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.
- If you cause a static discharge when touching the unit and the unit fails to function, simply unplug the unit from the AC outlet and plug it back in. The unit should return to normal operation.

## Operation

In the manual, the OSD ( on screen display ) may be different from your TV's, because it is just an example to help you with the TV operation.

There are several options you might need to set up in order for your TV to work properly. Read the instruction that follow.

### Switching On/Off the TV set

1. First, connect power cord correctly.
2. Select the viewing source by using INPUT button on the remote control.
3. When finished using the TV,press the POWER button on the remote control. The TV reverts to standby mode.
4. If you intend to be away on vacation, disconnect the power plug from the wall power outlet.

### Note

If the TV in power on, the screen information according the type of input signal. The information will disappear.

If there is no signal, "No Signal" will display on the screen.

# Menu Operation


## Basic operation

### Turning on and off the TV


#### TURN ON LCD TV

1. Connecting to the AC input cable then press the main power switch to switch ON LCD TV. At this time the TV will enter standby mode and indicator show red.
2. Use POWER button can turn ON LCD TV from standby mode

#### TURN OFF LCD TV

1. Press POWER button or  button on the remote control to enter standby mode. The indicator is red.
2. Using main power switch turns off LCD TV completely.



- When you are operating the menu, there are some cueing informations on the bottom of the menu, it can clue you to operate the menu favorably. For example : 
- Press MENU button to return to previous menu and press EXIT button to exit the main menu.
- Press CH+/CH-/VOL+/VOL- button to move the cursor in the menu.
- If the time that no signal will be received and you don't operate it is over 15 minutes, TV set will be in standby condition.


### Select on screen language

**NOTE:** If you use your LCD TV for the first time, you should select the language which will be used for displaying menus and indications.



 
- Press **MENU** to display the main menu.
- Press **▲/▼** repeatedly and use **MENU** to select the **SET UP** menu.
- Use **ENTER** to select **MENU LANGUAGE**.
- Press **◀** button repeatedly to select your desired language.
- When you are satisfied with your choice, press the **MENU** or **EXIT** to exit.

## Volume adjustment

1. Press **VOL+/-** to adjust the volume.
2. If you want to switch the sound OFF, press the **MUTE** .
3. You can cancel this function by pressing **MUTE** or **VOL+ / VOL-**.

## How to adjust the OSD screen

- Press the **MENU** button to display the main menu.
- Use **▲/▼/▶/◀** buttons to select and adjust the available menus.

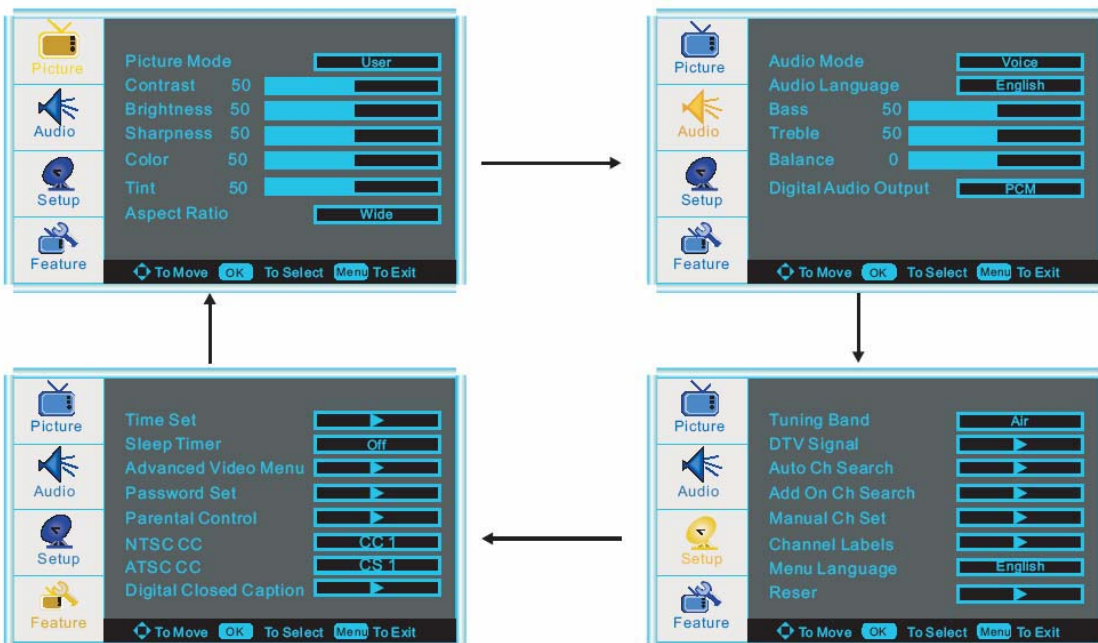

The OSD (On Screen Display) function enables you to adjust the screen status conveniently since it provides graphical presentation.

## Choosing a TV channel

1. Using the CH+/CH- on the front panel or on the remote control.

- Press **CH+** to increase channel number.
- Press **CH -** to decrease channel number.

2. Using 0-9 digital buttons and - button

You can select the channel number by pressing 0 to 9 and pressing ENTER to confirm you selection.

Press the - button to enter a program number for multiple program channel.

 
3. Example:

- To select 1-digit channel (e.g. Channel 5): Press the 5 and ENTER button.
- To select 2-digit channel (e.g. Channel 20): Press the 2 and 0 buttons, then press ENTER button.
- To select 3-digit channel (e.g. Channel 103): Press the 1 and 0 and 3 buttons, then press ENTER button.
- To select a program number for multiple program channel (e.g. Channel 2-1): Press the 2 button, then press - and 1 button.

Note: After select the digit button, the digit will be memorized.

## Selecting input source

You can select the input source by pressing the **INPUT** on the remote control or on the front panel.

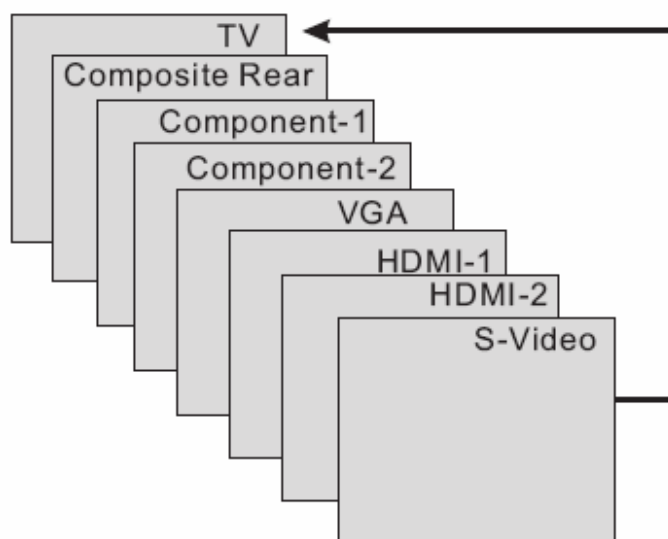


## Picture menu options



In this manual, the OSD ( On Screen Display) may be different from your TV' s because it is just example to help the TV operation.

 Press the **MENU** on the front panel or on the remote control and then use **◀/▶** and **▶/ENTER** to select the **Picture** menu.

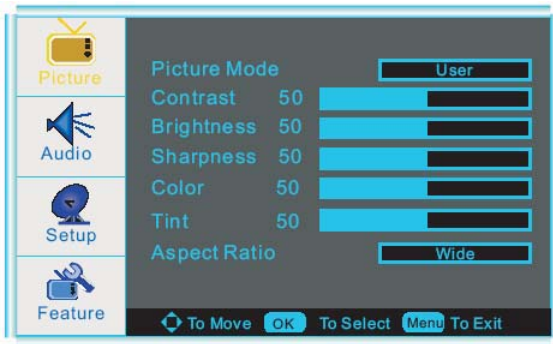

1. Press **▶/ENTER** to enter the picture menu
2. Press **▲/▼** button to move the cursor to the item to be selected.
3. Use **▶/ENTER** button to select what you want to adjust in the **Picture** menu
4. Press **◀/▶** button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.

### Picture Mode

Select the type of picture which best corresponds to your viewing requirements by selecting Picture Mode in PICTURE menu. Press ENTER button to select the picture mode such as User/Standard/Vivid/Bright. Besides, you may change it directly by pressing the PMODE button on the remote control. Only you select User, the onrast/Brightness/Sharpness/Color are operable.

#### Contrast

Press **▲/▼** - button and then use **◀/▶** to adjust the contrast of the picture.

#### Brightness

Press **▲/▼** button and then use **◀/▶** to adjust the brightness of the picture.

#### Sharpness

Press **▲/▼** button and then use **◀/▶** to adjust the sharpness level of picture.

#### Color

Press **▲/▼** button and then use **◀/▶** to adjust the color saturation.

#### Tint

 
Press **▲/▼** button and then use **◀/▶** to adjust the tint of picture.  
But this function is available in the NTSC which is one of the color system.

#### Aspect Ratio

Press ENTER button to select the ratio of picture display such as Normal/ Zoom/ Wide and Cinema. Besides, you may change it directly by pressing the ZOOM button on the remote control.

## AUDIO menu options

Press **MENU** on the front panel or on the remote control and then use **▲/▼** and **▶/ENTER** to select the **AUDIO** menu.

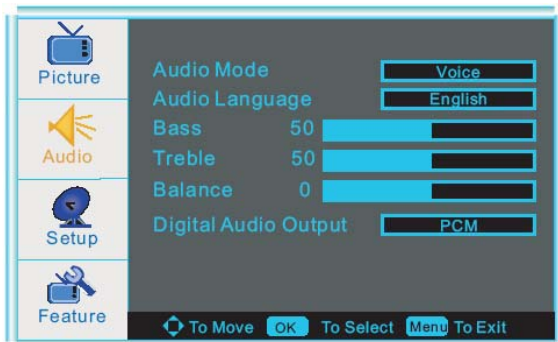

1. Press **▶/ENTER** to enter the Audio menu
2. Press **▲/▼** button to move the cursor to the item to be selected.
3. Use **▶/ENTER** button to select what you want to adjust in the **Audio** menu
4. Press **◀/▶** button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.

### Audio Mode

You can select the type of sound which best corresponds to your listening requirements by selecting Sound in SOUND menu. Press ENTER button to select one of the audio mode such as User/Voice/Concert/Jazz. Also, you may select the it directly by pressing the SMODE button on the remote control. Only you select User, the Bass /Treble are operable.

### Audio Language

Press ◀/▶ to select one of the audio language such as English/ French and Spain, but the condition is that the program system has included the language code, or else, this item isn't available, and you can't select it.

### Bass

Press ▲/▼ button and then use ◀/▶ to increase or decrease the level of the lower-pitched sounds.

### Treble

Press ▲/▼ button and then use ◀/▶ to increase or decrease the level of the higher-pitched sounds.

### Balance

Press ▲/▼ button and then use ◀/▶ to adjust the audio output between left and right speakers.

### Digital Audio Output

Press ENTER to select the one of mode of the digital audio output such as PCM and RAW. This function is available, when the channel that you are viewing is DTV or the input source is HDMI.

## Setup menu options

Press MENU on the front panel or on the remote control, then use ▲/▼ and ▶ /ENTER to select Setup the menu.



1. Press ▶/ENTER to enter the Setup menu
2. Press ▲/▼ button to move the cursor to the item to be selected.
3. Use ▶/ENTER button to select what you want to adjust in the **Setup** menu
4. Press ◀/▶ button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.

### Tuning Band

Press ENTER key to select Air, Cable, Cable HRC, Cable IRC or Cable Auto. Besides, you may change it directly by pressing the AIR/CABLE button on the remote control. When you select Air, the range of channel is 2-69. And when you select Cable, the range of channel is 1-135.

### DTV-Signal

In DTV mode, you can refer the strength of the current channel, and you can tune manually and adjust the angle, orientation of the antenna etc.

### Auto Ch Search

Press ▲/▼ key to move the cursor to the item to be selected (item selected is highlighted in yellow). Press ENTER key to enter your selection and scan. After the scan is finished, the following menu will display. The channels found are automatically saved as below:

 


**Add On Ch Search**

When the channels are found, use ◀/▶ to add new channels to the channel list.


**Manual Ch Set**

Press ENTER button to display a channel list that you can select channel as below:

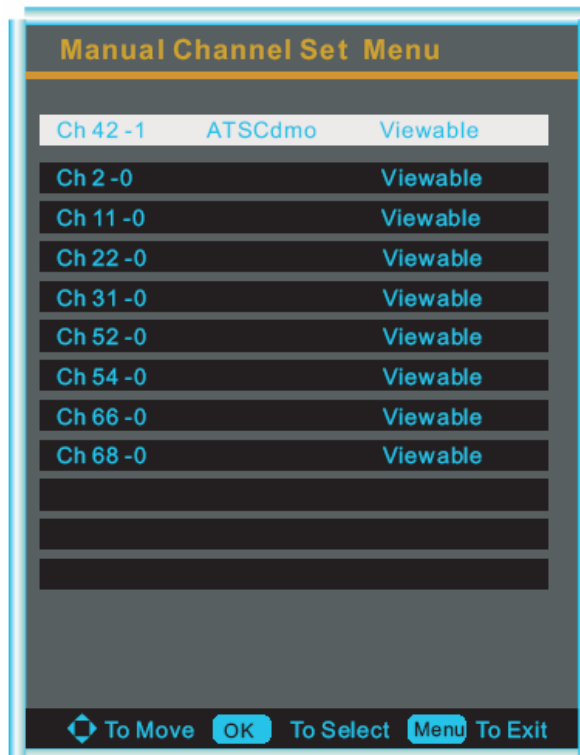

**Channel labels**

 Allows you to name the channel that is selected. Use ◀/▶ to move the cursor and use ▲/▼ to input the name as following:

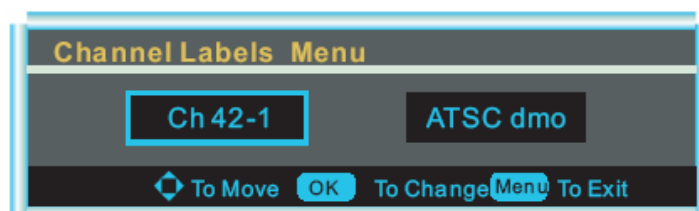

### Manual Language

 
Press ENTER key to select language of the OSD such as English/ French and Espanol.

### Reset

Press ENTER to return to the default set.

## Feature menu options


Press MENU on the front panel or on the remote control and then use ◀/▶ and ENTER to select the Feature menu.

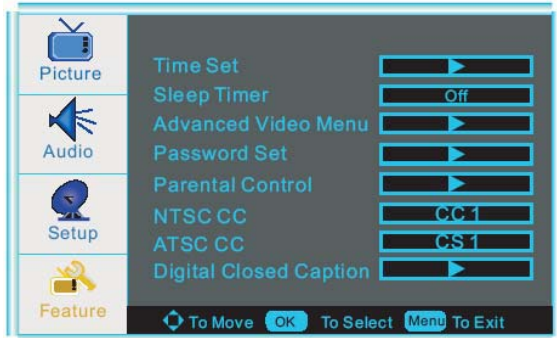

1. Press ▶/ENTER to enter the Feature menu
2. Press ▲/▼ button to move the cursor to the item to be selected.
3. Use ▶/ENTER button to select what you want to adjust in the **Feature** menu
4. Press ◀/▶ button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.

### Time Set

 Press ▲/▼ button and then use ▶/ENTER button, the time set menu as below that allows you to set the time the TV will display. Only Valid at DTV channel.

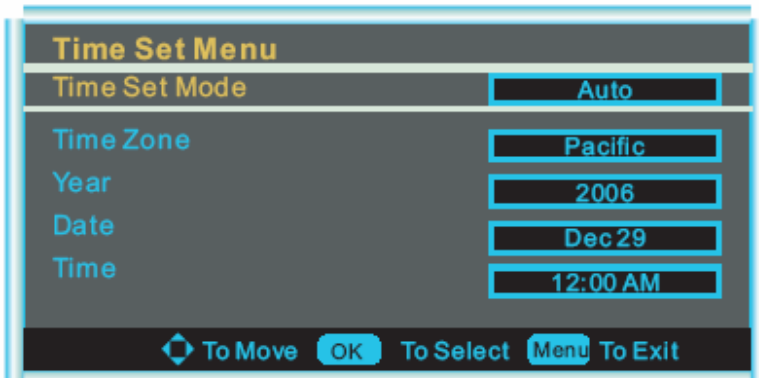

### Time Set Mode

You can select one of auto and manual to set the time. When selected auto, the item of year/date and time will be disabled and can not to adjust. When select the manual mode, you can press ◀/▶ and ▲/▼ to set the corresponding functions.

### Time Zone

Press ◀/▶ to select the time zone such as Pacific/Alaska/Hawaii/ Eastern/ Central/Mountain.

 
### Sleep Timer

Press ENTER button to select the amount of time before your TV turn off automatically. Such as 15 min/30 min/45 min/ 60 min/ 90 min/120 min/180 min/240 min/Off.

### Advanced Video Menu

Press OK to enter the advanced video menu as below:

- Noise Reduction--Spatial: press ◀/▶ to select on or off.
- Noise Reduction--Speckle: press ◀/▶ to select on or off.
- Noise Reduction--Temporal: press ◀/▶ to select on or off.
- Auto Contrast Enhancement: press ◀/▶ to select on or off.
- Color Temperature: press ◀/▶ to select one of Normal/Cool and Warm.
- 3D Y/C: press ◀/▶ to select on or off.

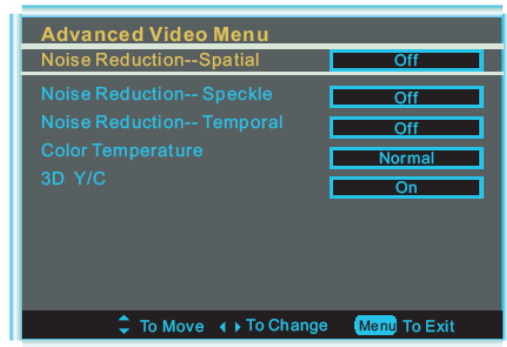


### Password Set

Press ENTER button to enter the Enter Old Password menu, and then input the number of 0-9 as below, and you can change the password when you input the new one twice.



### Parental Control

 Press ENTER to enter the sub-menu and then use the 0-9 to enter the correct password.

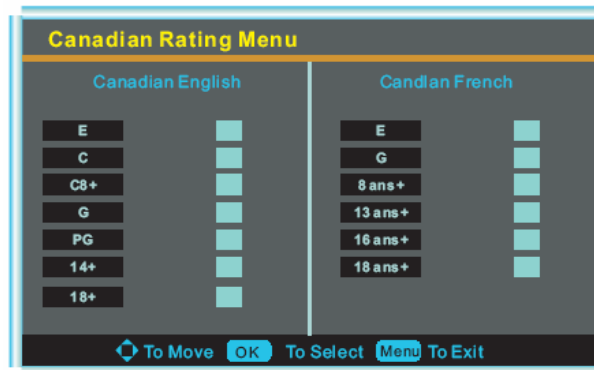

### NTSC CC

 
Press ENTER to select CC1/CC2/CC3/CC4/TEXT1/TEXT2/TEXT3/TEXT4

### ATSC CC

Press ENTER to select CS1/CS2/CS3/CS4/CS5/CS6.

### Digital Closed Captions


This item allows you to set the closed caption, and press ENTER to enter Closed Caption Options menu as below:

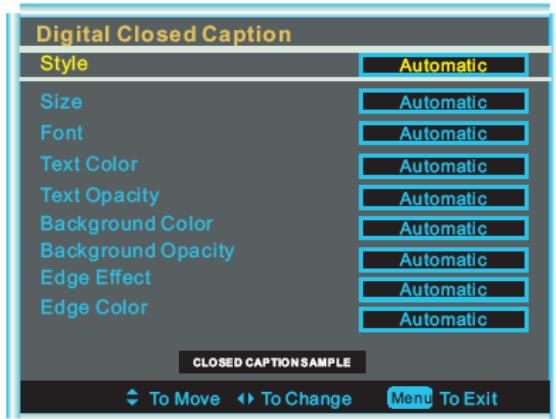

- Style: press ◀/▶ to select one of Automatic and Custom, when you select automatic, the others are disabled and cannot be adjusted.
- Size: press Enter to select one of Normal/Large and Small.
- Font: press Enter to select one of Default and from Font1 to Font7.
- Text Color: press Enter to select one of Red/Green/Blue/Yellow/Magenta/Cyan/Black and White.
- Text Opacity: press Enter to select one of the Solid/Flashing/Transparent/Translucent.
- Background Color: press Enter to select one of the Black/White/Red/Green/Blue/Yellow/Magenta/Cyan.
- Background Opacity: press Enter to select one of the Solid/Flashing/Transparent/Translucent.
- Edge Effect: press Enter to select one of the None/Raised/Depressed/Uniform/Left Shadow/Right Shadow.
- Edge Color: press Enter to select one of the Black/White/Red/Green/Blue/Yellow/Magenta/Cyan.

## Feature menu options VGA

 
Press MENU on the front panel or on the remote control and then use ▲/▼ and OK to select the Feature menu in VGA mode.

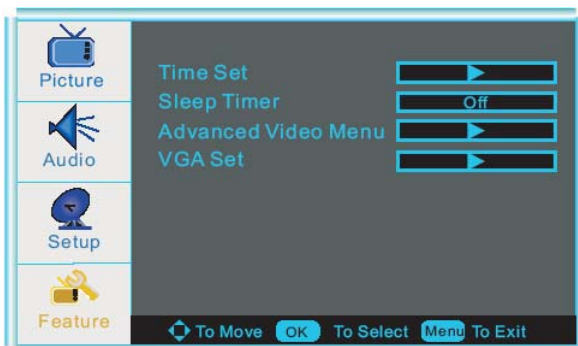

1. Press ▶/ENTER to enter the Feature menu
2. Press ▲/▼ button to move the cursor to the item to be selected.
3. Use ▶/ENTER button to select what you want to adjust in the Feature menu
4. Press ◀/▶ button to adjust.
5. When you are satisfied with your adjustment, press MENU or EXIT to exit the main menu.

## VGA Set

 Press ▲/▼ button and then use ENTER to enter the VGA set menu as below:

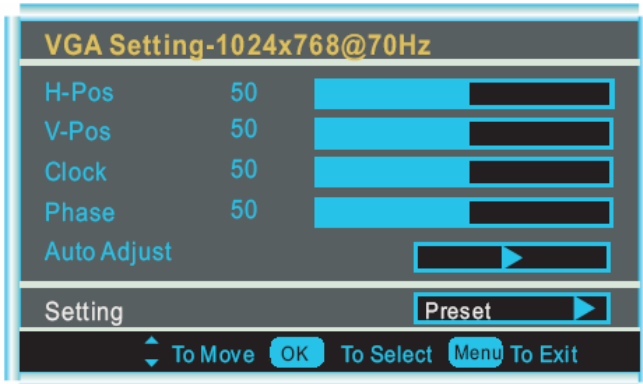

### H-Pos

Press ▲/▼ button and then use ◀/▶ adjust the horizontal position of the picture.

### V-Pos

Press ▲/▼ button and then use ◀/▶ adjust the vertical position of the picture.

### Phase

Press ▲/▼ button and then use ◀/▶ to adjust the phase of the picture.

### Clock

Press ▲/▼ button and then use ◀/▶ to adjust the clock of the picture.



- Phase This function allows you to remove any horizontal noise and clear or sharpen the image of characters
- Clock This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size also will change.
- Position This function is to adjust the picture to Left/Right and Up/Down as you prefer.

### Auto Adjust

Press ▲/▼ button and then use ENTER button to do auto adjust that automatically adjusts the available options for the best viewing configuration.

### Setting

Press Enter to do preset that can return to the factory setting.

## Feature menu options in Component

 
Press **MENU** on the front panel or on the remote control and then use **▲/▼** and **▶/ENTER** to select the **Feature** menu in **YpbPr** mode.



1. Press **▶/ENTER** to enter the **Feature** menu
2. Press **▲/▼** button to move the cursor to the item to be selected.
3. Use **▶/ENTER** button to select what you want to adjust in the **Feature** menu
4. Press **◀/▶** button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.


### Component Set

Press **◀/▶** button and then use **ENTER** to enter the **Component** set menu as below:

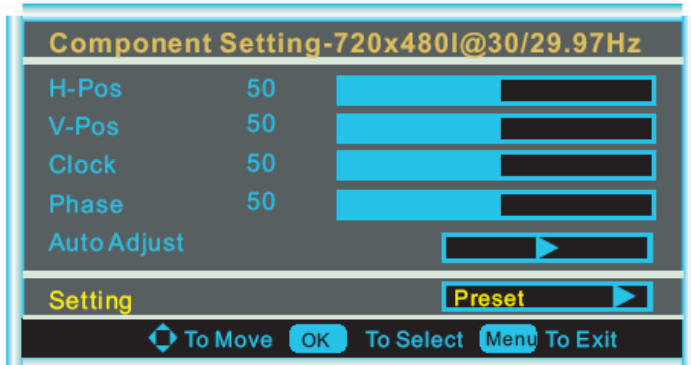

## Feature menu options in HDMI

 Press **MENU** on the front panel or on the remote control and then use **▲/▼** and **▶/ENTER** to select the **Feature** menu in **HDMI** or **S-VIDEO** mode.

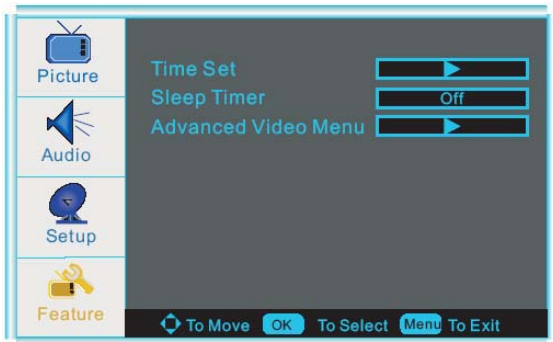

1. Press **▶/ENTER** to enter the **Feature** menu
2. Press **▲/▼** button to move the cursor to the item to be selected.
3. Use **▶/ENTER** button to select what you want to adjust in the **Feature** menu
4. Press **◀/▶** button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.

### Time Set

Press **▲/▼** button and then use **ENTER**, the time set menu as below that allows you to set the time the TV will display.

### Sleep Timer

 
Press ◀/▶ button to select the amount of time before your TV turn off automatically and press the ENTER that can select the 30 min/60min/90min and OFF.

### Advance Video Menu

Press ENTER to enter the advance video menu.

## Feature menu options in S-Video and Composite Rear

Press MENU on the front panel or on the remote control and then use ▲/▼ and ENTER to select the Feature menu in S-Video mode.

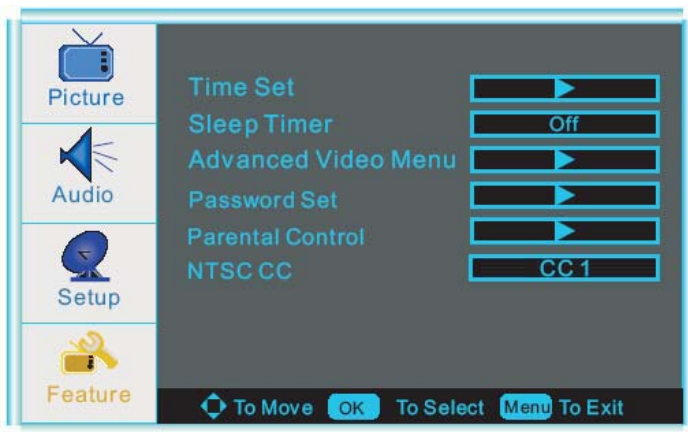

1. Press ▶/ENTER to enter the Feature menu
2. Press ▲/▼ button to move the cursor to the item to be selected.
3. Use ▶/ENTER button to select what you want to adjust in the **Feature** menu
4. Press ◀/▶ button to adjust.
5. When you are satisfied with your adjustment, press **MENU** or **EXIT** to exit the main menu.

# Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

## Cleaning the Screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

## Cleaning the Cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

## Extended Absence

If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

# Product Specification

Items	Relevant illustrations		
<b>The whole machine parameters</b>	Screen size, visible	42 PLASMA TV	
	Screen format	16:9	
	Display area	933.89mm wide and 532.22mm high	
	Resolution	1024(H) × 768(V) pixels	
	Maximum contrast ratio	10,000:1	
	Maximum brightness	1,500 cd/m <sup>2</sup>	
	Display colors	16.7M	
	Maximum viewing angle	160° (Horizontal) / 160° (Vertical)	
	Maximum response time	/	
	Maximum lifetime of background light	70,000 hours	
	Dimension (packed)	1155*390*880mm	
	Weight (net)	Appro109.17LB include power supply.	
	Accessories	Remote-Control, Power cord, Component Cable, User Guide, Quick Set up Guide, Warranty Card	
	Power requirement	100~240V AC, 50/60Hz	
	Power mode	Normal, Standby	
	Normal Power Dissipation	≤280W	
	Standby Power Dissipation	<1W	
	Plug and Play(PnP)	Support	
	All-powerful remote control	Support	
Channel and Frequencies	VHF-L: 55.25 ~ 133.25 MHz; VHF-H: 139.25 ~ 415.25 MHz; UHF: 421.25 ~ 859.25 MHz.		
<b>TV</b>	TV system	ATSC system	NTSC-M
		DTV system	8VSB/QAM
	Stereo	BTSC、A2/NICAM	
	Audio Output	2×10W	
	Intermediate Frequency	NTSC-45.75 MHz	
	OSD language	English// Francais/ Spanish	
	CCD/V-CHIP	Support	
	Local control keys	INPUT,MENU ,VOL- VOL+ Pro- Pro + POWER	
	Color standard	ATSC, NTSC	
	AV	YPbPr, VGA, HDMI input VIDEO, S-VIDEO input,Use one-road input of audio frequency totally(L/R)	
<b>Other Inputs and Outputs</b>	VGA	VGA/SVGA/XGA/SXGA/UXGA	
	YPbPr	480i/480P/576i/576P/720P50/720P60/1080i50/1080i60	

# Troubleshooting

For the sake of time and cost, it is strongly recommended that you check out the problem by yourself according to the instructions listed hereunder before contacting the after-sales service for technical assistance.

No picture, no sound	Verify if the television is properly plugged. Verify if the television is properly supplied power. Verify if electricity is available.
Blank screen	Verify if correct signals are input. Press INPUT button to change signal input to TV input. Restart the television if power supply is interrupted.
No sound	Press Mute button and verify if Mute mode is set. Switch to other channel and verify if the same problem happens. Press VOL+ button to see if the problem can be solved.
Poor sound	Verify if sound system is correct. Refer to Page 22 for adjustments.
No picture in some channel	Verify if correct channel is selected. Adjust the antenna. Make adjustments by Fine Tune and Manual Scan.
No color for some channel program (black and white)	Verify if the same problem exists in other channels. Check out of picture and sound systems. Refer to relative instructions in the Manual for color adjusts.
Spots with some or all pictures	Verify if the antenna is correctly connected. Verify if the antenna is in good condition. Make fine adjustment of channel.
Horizontal/vertical bars or picture shaking	Check for local interference such as an electrical appliance or power tool.
Television out of control	Disconnect the television from power supply and, 10 seconds later, connect the television to the power supply. If the problem still exists, contact authorized after-sales service for technical assistance.

**Note:** Do not leave the television with static picture in an extended period as the image may become permanently burned.

**Note:** Production of the plasma screen requires high and precision technologies. However, there might be some dark or bright (red, blue or green) spots, or some anomalistic stripes or spots. This is not defect. If the TV set is used in an area 2,400 meters above the sea level where the air pressure is below 750hpa, the picture on the plasma screen may be affected and a muffled sound might be produced. These phenomena might happen in the area 1,500 meters above the sea level. This is resulted from difference between air pressures inside and outside the display. This is not a defect covered by the limited warranty.